
What's in the Box? 2-Slot Cradle

- > 1 x KDC180 2-Slot Cradle with No-Boot Spacer
- > 1 x KDC180 2-Slot Cradle with UHF Spacer (Optional)
- ▶ 1 x 5V/2.4A USB Adaptor
- → 1 x USB TYPE-C Cable

 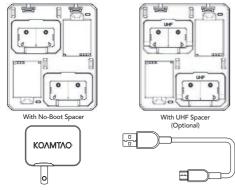


* The shape of the adaptor may vary by country.

 
What's in the Box? 10-Slot Cradle

- ▶ 1 x KDC180 10-Slot Cradle with No-Boot Spacer
- > 1 x KDC180 10-Slot Cradle with UHF Spacer (Optional)
- > 1 x 12V/10A DC Power Adaptor

With No Boot Spacer	








ΚΟΛΜΤΛΟ

116 Village Blvd, Ste 305, Princeton, NJ 08540 +1 609-256-4700 p | +1 609-228-4373 f info@koamtac.com | www.koamtac.com


Charging via USB Connector (2-Slot)

The 5V/2.4A USB adaptor supports 5V normal charging when the KDC180 is placed into the charging cradle. (A)

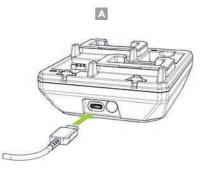


KOVWLVC

KDC180 Charging Cradle Mini Guide

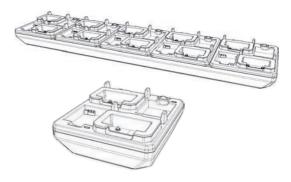

Charging via DC Connector (10-Slot)

The 12V/10A DC power adaptor supports 5V normal charging when KDC180 scanners are placed into the charging cradle. (B)

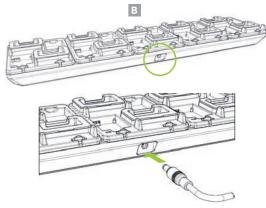

Cradle Power LED Status

Battery LED Status

Main Power

Green: Always on when the cradle is powered on

Charging with a Protective Boot


- 1. Remove the No-Boot spacer from the cradle by pulling the tab on the back of the spacer up. (D)
 - 100

2. KDC180 devices other than UHE models can now be charged while wearing a protective boot. To charge, place the KDC180 into the cradle as shown below: (E)

How to Charge Your KDC180

For all models other than the KDC180 with UHF, charge the KDC180 by placing it into the cradle as shown below: (C)


Green: Fully charged **Orange:** Charging

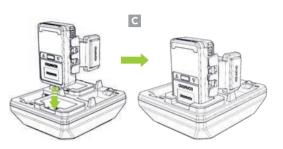

* KDC180W model with optional Inductive charging antenna can be charged on both Qi compliant wireless charging pad and charging cradle.

Charging UHF Models (Optional)

Make sure the UHF spacer is installed and then place the KDC180 UHF model into the cradle as shown below: (F)

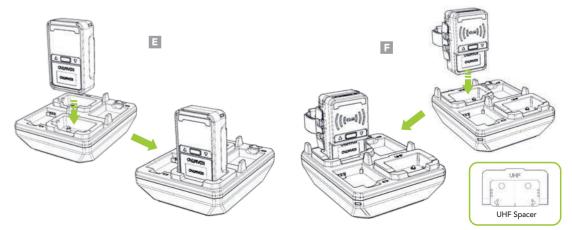





Status LED